


\* **ACHTUNG: Schubarm 2 verwenden !**  
*CAUTION: Use extension boom 2 !*  
**ATTENTION: Utilise 2eme extension !**

05 MAJ 2009


tegning 2

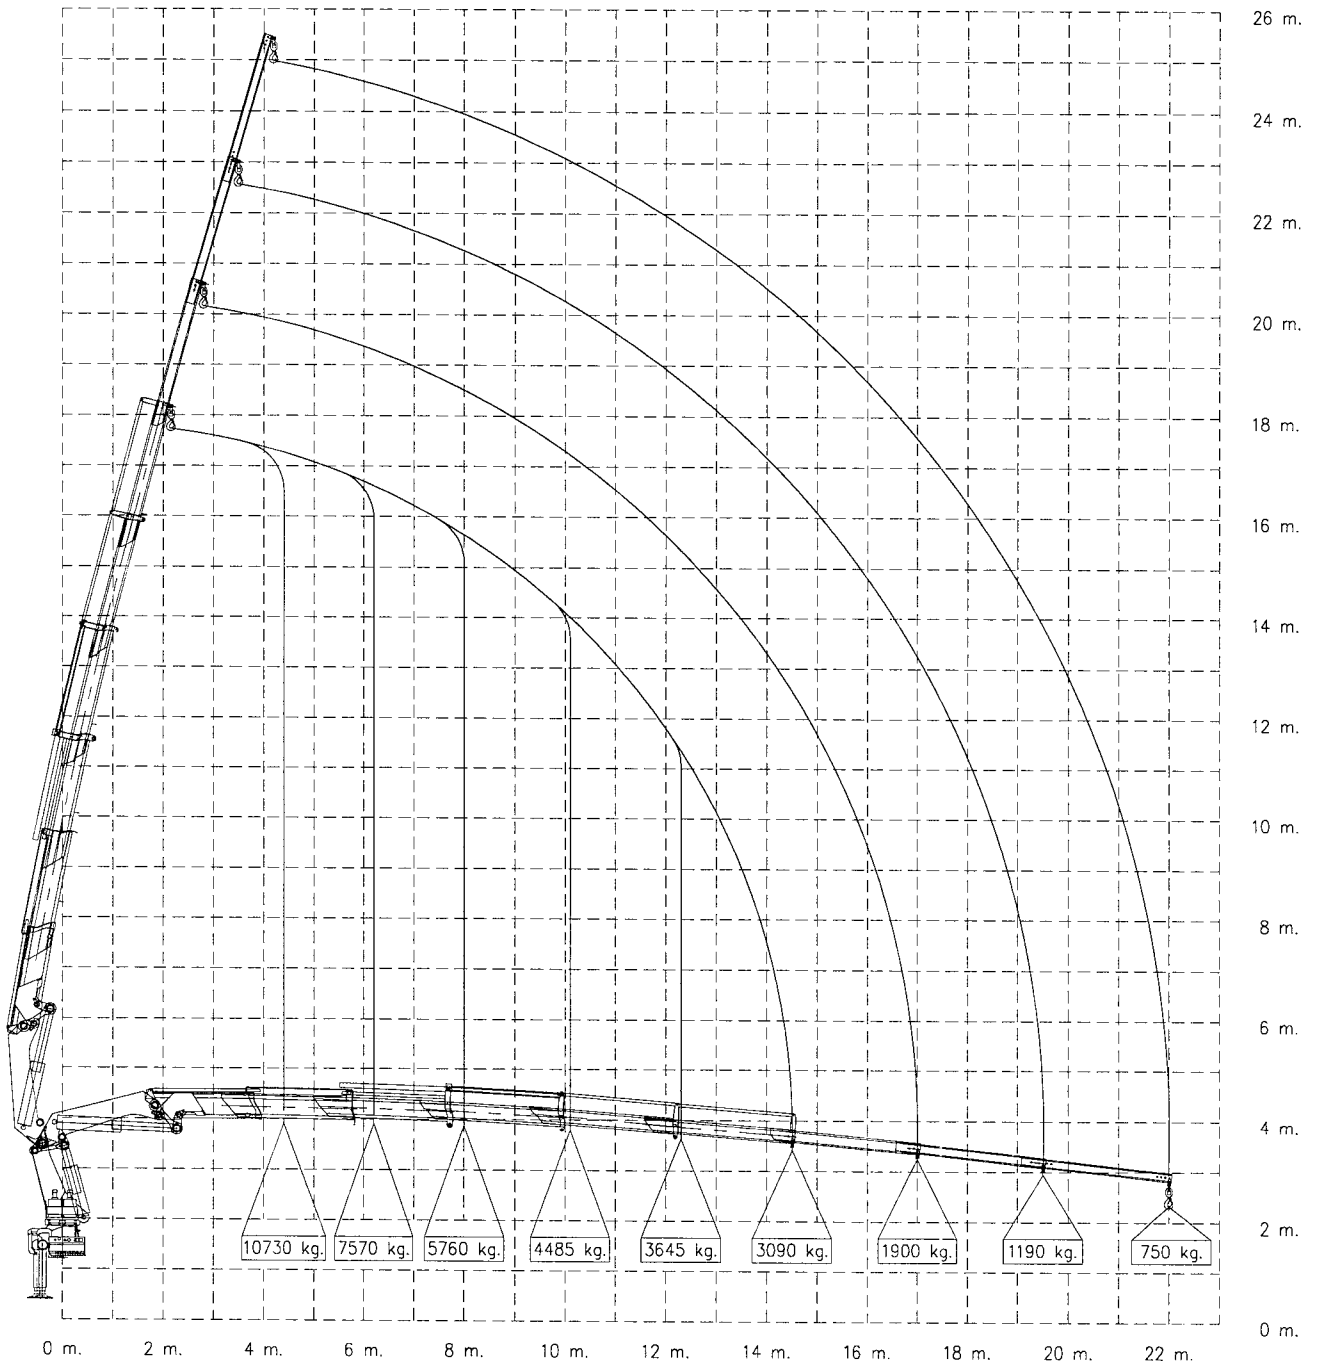

Tilføjsløftediagram for manuelle forlængerarme.

W/A	Genstand	Antal	Tegh. Nr.	Metertype	Løft/Gæst
	Dato	Rettesse	Dato	Rettesse	
Firma:		W/forhold	Tegh.	Op. bl. nr.	afst.
		1:50	skat.		
			Format		
Genstand:		CAD-TEK A/S - Tårnvej 111 75171 G2			
Løftediagram		CT00-040			
Palfinger PK 52.000 D V3					
CAD nr.:		CT00040			

*Handwritten signature and initials*

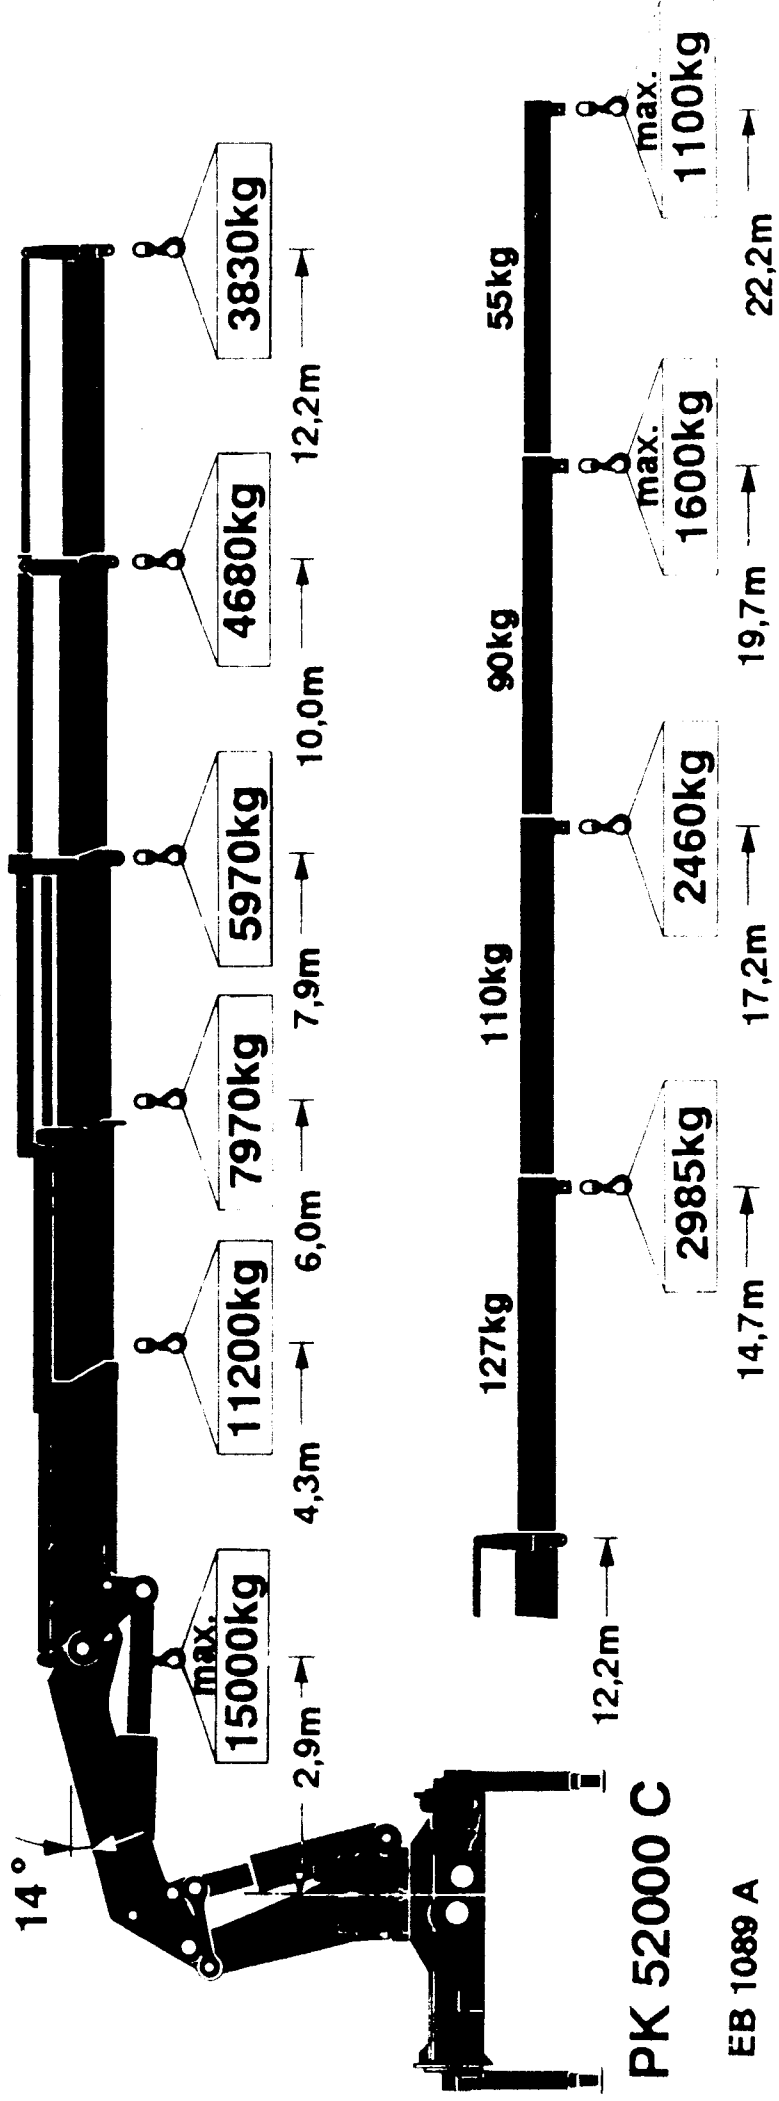

**PK 52000 C**

**EB 1089 A**

